

PROGRAMMABLE WELDING SYSTEMS PLUG & PLAY

CB-007-1



Digital Control

Application: E.Z. Arc System

Features:

Full digital control:

- PLC controller with programmable 5.6 inch HMI touch screen, intuitive graphic interface

Flexible welding setting:

- Input work piece diameter and linear speed
- Welding sequence and 8 configurable timers allow easy and flexible settings including multiple revolutions and skip welding

Precision speed control:

- Closed loop driver system with encoder feedback provides constant speed for unbalanced loading
- Motor gain adjustment for acceleration/deceleration (output 24 volt DC 100 watt)

Program multiple welding sequences:

- Stores up to 100 programs (0 to 6 min each) and can be saved and loaded for future use
- Initiate/retract pneumatic torch lift tail stock


Easy to use Mini-scope:

- Monitors motor RPM, command voltage and angular position values simultaneously for maximum of six minutes

Maintenance function:

- Alarm history, alarm messages, and PLC I/O monitoring functions for trouble shooting


DIY Accessories Kits

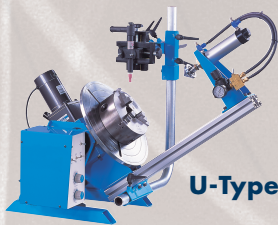


U-Type



S-Type

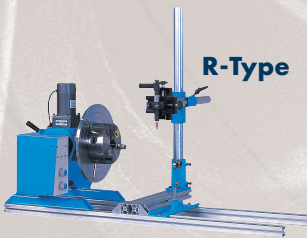

R-Type

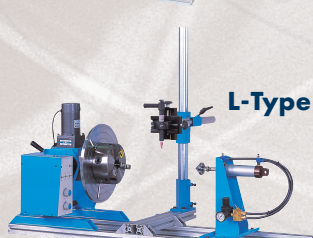


L-Type

R and L type kits available (48", 60", 72" mounting rails)
L-kit approx max part length is 20" with 48" mounting rail


Models shown above are with Positioners, Controllers and 3-Jaw Chucks.
Controllers, Positioners and 3-Jaw Chucks are not part of the DIY Accessories Kits.

*Optional accessories include
welding system mounting tables*

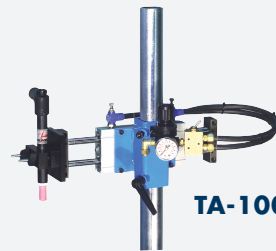


TA-100

Torch Slide

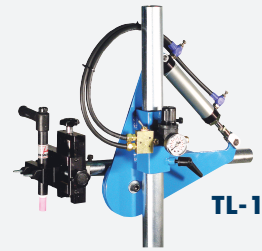


TL-100

Torch Lift

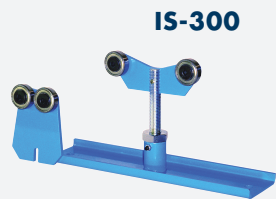

IS-300

Idler Stand

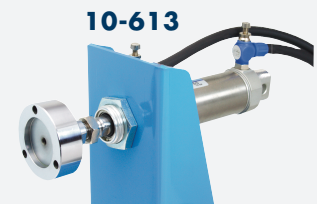

10-613

Flange-Adapting
Fixture w/ Bearing

Visit our website for complete product offering:

Welding Positioners, Manipulators, Head & Tail Stock Assembly, Turntables, Welding Lathes, Seamers, Coil Splicers, Turning Roll Sets, CNC-Cutting Machines

WELDING POSITIONERS

E.Z.Arc Systems

PT-102 & PT-202



GENTEC precision digital positioners position the welding joint in the 'down hand' position to obtain the shortest possible welding time.


FEATURES

- Precision speed controls
- 5 digit LED display meter indicates RPM
- Encoder mounts onto PMDC motor
- Allows for input voltage hookup 90~260VAC without manual linking
- All units are high frequency protected
- Remote foot switch Run/Stop control
- Standard speed models: A for 0.15~5rpm, C for 0.4~15rpm and additional speed ranges available on special order
- Compatible with E.Z.Arc automatic welding system
- Digital display meter on the control box
- Outstanding speed range: Adjusting ratio: 1:37.5
- Standard 1" diameter through-hole for gas purge
- Emergency stop button
- CE conformity

Optional Welding Chucks

PG-150

Outside Clamp: 3/16" ~ 6"
Inside Clamp: 2" ~ 5-7/8"

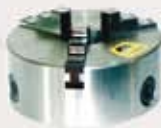

PG-450

(Optional)
Welding Chuck
3/16" ~ 18"



PG-500

Outside Clamp: 3/16" ~ 19-5/8"
Inside Clamp: 2-1/4" ~ 21-1/4"



**E.Z.ARC Systems - Compatible
System Welding Mounting Tables Available**

Visit our website for complete product offering:

Welding Positioners, Manipulators, Head & Tail Stock Assembly, Turntables, Welding Lathes, Seamers, Coil Splicers, Turning Roll Sets, CNC-Cutting Machines



www.genstartech.com

GENSTAR TECHNOLOGIES COMPANY, INC.

4525 Edison Avenue, Chino, CA 91710

Tel 909-606-2726

Fax 909-606-6485